## U05\_新場域使用者後續維護流程手冊

## 1. 現場維護需攜帶設備:

- ※ 因安全因素,現場無法直接使用網路線進行設備實體連接,因此電腦需要具備連接設備 WiFi 以及 Internet 之功能
- a) 筆記型電腦 ( 需安裝 TeamViewer、Webex...等可提供遠端接入或遠端指 導的軟體)
  - TeamViewer • **Team**Viewer AnyDesk AnyDesk Webex by **CISCC**
  - Zoom



b) 外接式無線網路卡 (電腦無法透過 USB 連接手機上網則需要)



c) USB 數據卡 ( 若電腦無 ETH 端口則需要)



d) 4G/5G 手機,並裝有中華電信、遠傳電信、台灣大哥大...等 USIM 可使用 網際網路服務



e) 網路線,若現場傳輸非採直連方式而有數據機時,可透過網路線連接數 據機進行 PING,確認傳輸部份是否沒有問題可以連接 Internet。



## 2. 檢查 LED 指示燈:

- a) 在所有組件連接完畢後,打開基地台的電源。等待幾分鐘後,檢查設備 底側的 LED。它們會按照 b) 提供的 LED 說明閃亮。
- b) LED 指示燈出現在設備底側,其表示的含義參考列表



Case	State to Indicate	LED Status
1	裝置上電	LED - 恆亮紅燈
2	基地台服務啟動中	LED - 綠燈閃爍
3	基地台服務啟動成功	LED - 綠燈恆亮
4	網路 IP 驗證中	LED - 藍色恆亮
5	嘗試與核網 SEC-GW 建立連線中	LED - 藍色閃爍

## 3. 網路訊號測試:

a) 準備 1 支可支援 Band20 的 Android 手機並插入 NCHC USIM ※ 手機推薦 Redmi Note 10 Pro 或是 LG G3





b) 至 Google 商店下載 G-NetTrack APP (Lite:免費、Pro:付費)



c) 確認手機是否支持 RSRP 訊號量測

BRAND:	htc	
MANUFACTURER:	нтс	
MODEL:	HTC_M10h	
BUILD NUMBER:	OPR1.170623.027	
ANDROID SDK:	26	
APP VERSION:	G-NetTrack Lite - 14.8	
PHONE TYPE:	GSM	
TECHNOLOGY:	4G-LTE	
CELLID:	YES	
LEVEL:	YES	
QUAL:	YES	
NEI QUAL:	YES	
NEIGHBOR CELLS:	YES	
SNR:	YES	
CQI:	-	
LTERSSI:	YES	
PSC:	YES	
ARFCN:	YES	
BANDWIDTH:	NO	
TA:	YES	
DUAL SIM TYPE:	UNKNOWN	
DUAL SIM PHONE:	false	
Your report helps b capabilities data	uilding phone measurement abase. Share your results.	
SEND REPOR	T AND VIEW RESULTS!	

d) 於主畫面確認訊號量測資訊是否正確



4. NCC 審驗報告範例

U04\_ncc 審驗報告\_無線電頻率運用指引\_v1